Thermocouple For additional thermowell, flameproof enclosure (Ex d) Model TC10-L

for further approvals

WIKA data sheet TE 65.12



Applications

- Chemical industry
- Petrochemical industry
- Offshore

Special features

- Sensor ranges from -40 ... +1,200 °C (-40 ... +2,192 °F)
- Measuring insert replaceable
- For many thermowell designs



Description

Thermocouples in this series can be combined with a large number of thermowell designs. Use without a thermowell is not permitted.

A wide variety of possible combinations of sensor, connection head, insertion length, neck length, connection to thermowell etc. are available for the thermometers; suitable for almost any thermowell dimension. Fig. left: Model TC10-L with connection head 7/8000 Fig. right: Model TC10-L with connection head 1/4000



Page 1 of 12

Explosion protection (option)

The permissible power P_{max} as well as the permissible ambient temperature for the respective category can be seen on the EC-type examination certificate, the Ex certificate or in the operating instructions.

Attention:

Only with the correspondingly suitable protective components is operation in dust Ex hazardous areas permissible.

The built-in transmitter has its own certificate. The permissible ambient temperature ranges of the built-in transmitters can be taken from the corresponding transmitter approval.

Approvals (explosion protection, further approvals)

Logo	Description		Country
€€	 RoHS directive ATEX directive (option) Hazardous areas - Ex d Zone 1 gas 	II 2G Ex db IIC T1 T6 Gb] - with suitable solid-machined thermowell [II 2G Ex db IIB + H_2 T1 T6 Gb]	European Union
IEC.	Zone 21 dust IECEx (option) (in conjunction with ATEX) Hazardous areas - Ex d Zone 1 gas Zone 21 dust	[II 2D Ex tb IIIC T85 °C Db IP66] [Ex db IIC T1 T6 Gb] - with suitable solid-machined thermowell [Ex db IIB + H ₂ T1 T6 Gb] [Ex tb IIIC T85 °C Db IP66]	International
EALEX	EAC (option) Hazardous areas - Ex d Zone 1 gas Zone 21 dust	[1 Ex d IIC T1 T6] [DIP A21 Ta 80 440 °C]	Eurasian Economic Community
INAMETRO	INMETRO (option) Hazardous areas - Ex d Zone 1 gas	[Ex d IIC T* Gb IP66] [Ex d IIB + H ₂ T* Gb IP66]	Brazil
	DNOP - MakNII (option) Hazardous areas - Ex d Zone 1 gas Zone 21 dust	[II 2G Ex d IIB + H ₂ T4 T6] + [II 2G Ex d IIC T4 T6] [II 2D Ex tD A21 IP66 T85 °C]	Ukraine
C	GOST (option) Metrology, measurement tec	hnology	Russia
B	KazInMetr (option) Metrology, measurement tec	hnology	Kazakhstan
-	MTSCHS (option) Permission for commissionin	ıg	Kazakhstan
E	BelGIM (option) Metrology, measurement tec	hnology	Belarus
◙	UkrSEPRO (option) Metrology, measurement tec	hnology	Ukraine
Ø	Uzstandard (option) Metrology, measurement tec	hnology	Uzbekistan

Manufacturer's information and certificates

Logo	Description
s	SIL 2
Louis Koo	Functional safety (only in conjunction with model T32 temperature transmitter)

1) Only for built-in transmitter

Approvals and certificates, see website

Sensor

Thermocouple per IEC 60584-1 or ASTM E230

Types K, J, E, N, T (single or dual thermocouple)

Measuring point

- Ungrounded (standard)
- Grounded

Sensor types

Туре	Operating temperatures of the thermocouple			
	IEC 60584-1		ASTM E2	30
	Class 2 Class 1		Standard	Special
Κ	-40 +1,200 °C	-40 +1,000 °C	0 1,260 °	С
J	-40 +750 °C	-40 +750 °C	0 760 °C	
E	-40 +900 °C	-40 +800 °C	0 870 °C	
Ν	-40 +1,200 °C	-40 +1,000 °C	0 1,260 °	С
Т	-40 +350 °C		0 370 °C	

The table shows the temperature ranges listed in the respective standards, in which the tolerance values (class accuracies) are valid.

The actual operating temperature of the thermometer is limited both by the maximum permissible working temperature and the diameter of the thermocouple and the sheathed cable, as well as by the maximum permissible working temperature of the thermowell material.


Listed models are available both as single or dual thermocouples. The thermocouple will be delivered with an ungrounded measuring point.


For detailed specifications for thermocouples, see IEC 60584-1 or ASTM E230 and Technical information IN 00.23 at www.wika.com.

Tolerance value


For the tolerance value of thermocouples, a cold junction temperature of 0 $^\circ C$ has been taken as the basis.

Electrical connection

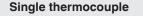

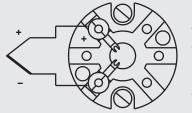


The colour coding at the positive poles of the instrument decides the correlation of polarity and terminal.

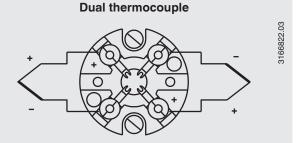

For the electrical connections of built-in temperature transmitters see the corresponding data sheets or operating instructions.

Connection head

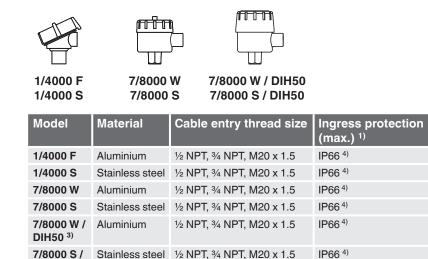

1) The ingress protection refers to the connection head, for information on the cable glands, see page 5 2) RAL 5022

DIH50³⁾

3) DIH50 LC display

4) Suitable seal/cable gland required

Connection head with digital display



Connection head 7/8000 W with LC display model DIH50 see data sheet AC 80.10 C.C.

To operate the digital display, a transmitter with a 4 ... 20 mA output is always required.

Flame path fitting

Cover / Cap

Screw-on lid

Screw-on lid

Screw-on lid

Screw-on lid

Screw-on lid

Screw-on lid

Surface

Blank

Blank

Blank

Blue, lacquered 2)

Blue, lacquered 2)

Blue, lacquered 2) 1/2 NPT

A flame path fitting is built into the connection head which, in conjunction with the measuring insert, generates a flameproof gap.

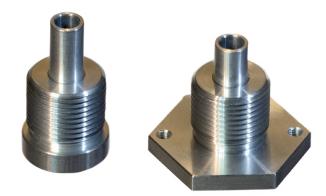


Fig. left: Flame path fitting for model 1/4000 connection head Fig. right: Flame path fitting for 7/8000 and 7/8000 connection heads with DIH50

Connection

to neck tube

1/2 NPT

1/2 NPT

1/2 NPT

1/2 NPT

1/2 NPT

Cable entry



The figures show examples of threaded connections and connection heads.

Cable entry	Cable entry thread size
Ex d cable gland stainless steel	M20 x 1.5 or ½ NPT
Plain threaded	M20 x 1.5 or ½ NPT
Sealing plugs for shipping	M20 x 1.5 or ½ NPT

Cable entry	Colour	Ingress protection (max.)	Min./max. ambient temperature
Ex d cable gland stainless steel	Blank	IP66	-60 ¹⁾ / -40 +80 °C
Plain threaded	-	IP00	-
Sealing plugs for transport	Transparent	-	-40 +80 °C

1) Special version on request (only available with selected approvals), other temperatures on request

Ingress protection

to IP66 per IEC/EN 60529 under the following conditions:


- Use of a suitable cable gland
- Use of a cable cross-section appropriate for the gland or select the appropriate cable gland for the available cable
- Adhere to the tightening torques for all threaded connections

Transmitter


Mounting onto the measuring insert

With mounting on the measuring insert, the transmitter replaces the terminal block and is fixed directly to the terminal plate of the measuring insert.



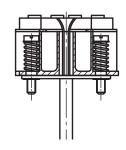

Measuring insert with mounted transmitter (here: model T32)

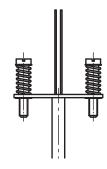

Measuring insert prepared for transmitter mounting









Output signal 4 20 mA, HART [®] protocol, FOUNDATION™ Fieldbus and PROFIBUS [®] PA				
Transmitter (selectable versions)	Model T16	Model T32	Model T53	
Data sheet	TE 16.01	TE 32.04	TE 53.01	
Output				
■ 420 mA	х	х		
HART [®] protocol		х		
■ FOUNDATION [™] Fieldbus and PROFIBUS [®] PA			х	
Input				
Thermocouples IEC 60584-1	K, J, E, N, T	K, J, E, N, T	K, J, E, N, T	
Explosion protection	Optional	Optional	Standard	

Possible mounting positions for transmitters

Connection head	T16	T32	T53
1/4000 F, 1/4000 S	0	0	0
7/8000 W, 7/8000 S	0	0	0
7/8000 W / DIH50, 7/8000 S / DIH50	0	0	-

O Mounted instead of terminal block

- Mounting not possible

The mounting of a transmitter on the measuring insert is possible with all the connection heads listed here. The fitting of a transmitter in the (screw) cap of a North American design connection head is not possible. Mounting of 2 transmitters on request.

For a correct determination of the overall measuring deviation, the sensor and transmitter measuring deviations must be added.

Functional safety (option) with temperature transmitter model T32




In safety-critical applications, the entire measuring chain must be taken into consideration in terms of the safety parameters. The SIL classification allows the assessment of the risk reduction achieved by the safety installations.

Selected TC10-L thermocouples, in combination with a suitable temperature transmitter (e.g. model T32.1S, TÜV certified SIL version for protection systems developed in accordance with IEC 61508), are suitable as sensors for safety functions to SIL 2.


For detailed specifications, see Technical information IN 00.19 at www.wika.com.

Components model TC10-L


"Nipple-union-nipple" neck tube

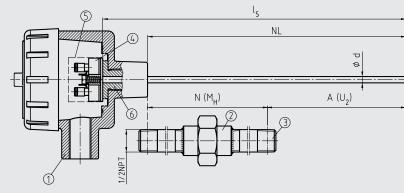


Double threaded hex bushing (tube section)

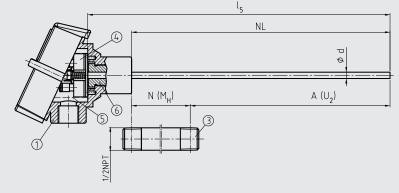

Double threaded hex bushing (with hexagonal spanner flats)

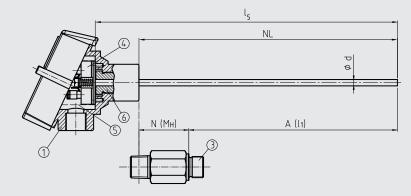

Neck tube with counter nut to head

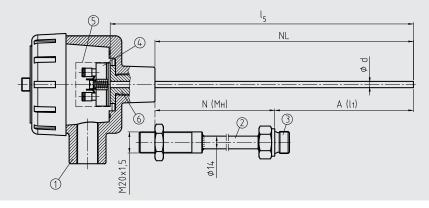

Legend:


- Connection head
- ② Neck tube
- ③ Connection to thermowell
- ④ Measuring insert
- (5) Transmitter (option)
- 6 Flame path fitting

A (l ₁)	Insertion length
. ,	(with parallel threads)
A (U ₂)	Insertion length
	(with tapered threads)
I_5	Measuring insert length
Ød	Measuring insert diameter
NL	Nominal length
N (M _H)	Neck length


3112147.04

Neck tube

Neck tube designs

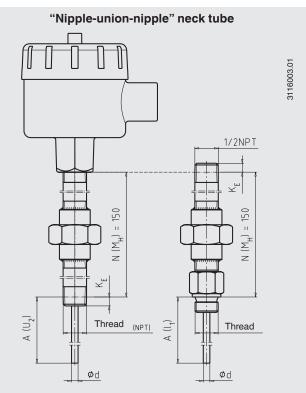


Double threaded hex bushing (with hexagonal spanner flats)

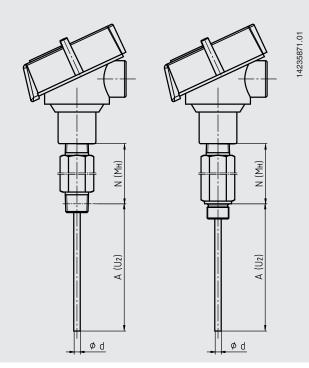


Double threaded hex bushing (tube section)

14235871.01

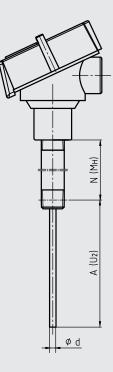

Neck tube with counter nut to head

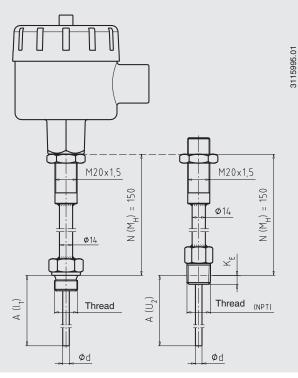

Legend:

- A (I_1) Insertion length (with parallel threads)
- $A(U_2)$ Insertion length (with tapered threads)
- N (M_H) Neck length

- Ø d Measuring insert diameter
- KE
- Screw-in length by hand
 - with ½ NPT approx. 8.1 mm
 - with ³/₄ NPT approx. 8.6 mm

Neck tube versions

Neck tube design	Diameter	Connection to head	Connection to thermowell	Material
"Nipple-union-nipple" neck tube	~ 22 mm	1/2 NPT	Mounting thread	316
	~ 27 mm	3/4 NPT		
Double threaded hex bushing	~ 22 mm	1/2 NPT	Mounting thread	316
(tube section)	~ 27 mm	3/4 NPT		
Double threaded hex bushing (with hexagonal spanner flats)	-	M24 x 1.5 / ½ NPT	Mounting thread	1.4571
Neck tube with counter nut to head	14 x 2.5 mm	M20 x 1.5 (with counter nut)	Mounting thread	1.4571

Thread sizes

Neck tube design	Diameter	Thread to the thermowell
"Nipple-union-nipple" neck tube	~ 22 mm	½ NPT
	~ 27 mm	3⁄4 NPT
Double threaded hex bushing (tube section)	~ 22 mm	1/2 NPT
	~ 27 mm	34 NPT
Double threaded hex bushing (with hexagonal	-	G ½ B
spanner flats)		G ¾ B
		G ¼ B
		1/2 NPT
		3/4 NPT
		M14 x 1.5
		M18 x 1.5
		M20 x 1.5
Neck tube with counter nut to head	14 x 2.5 mm	½ NPT
		3⁄4 NPT
		G ½ B
		G 34 B
		G ¼ B
		M14 x 1.5
		M18 x 1.5
		M20 x 1.5

Neck lengths

Neck tube design	Neck length	Min. / Max. neck length
"Nipple-union-nipple" neck tube	150 mm (approx. 6 inch)	75 mm (approx. 3 inch) / 250 mm (approx. 10 inch)
Double threaded hex bushing (tube section)	50 mm (approx. 2 inch)	50 mm (approx. 2 inch) / 250 mm (approx. 10 inch)
Double threaded hex bushing (with hexagonal spanner flats)	25 mm	
Neck tube with counter nut to head	150 mm (approx. 6 inch)	75 mm (approx. 3 inch) / 250 mm (approx. 10 inch)

The neck tube is screwed into the connection head. The neck length depends on the intended use. Usually an isolation is bridged by the neck tube. Also, in many cases, the neck tube serves as a cooling extension between the connection head and the medium, in order to protect a possible built-in transmitter from high medium temperatures.

Other versions on request

Measuring insert

Within the TC10-L, the measuring insert of model TC10-K is fitted.

The replaceable measuring insert is made of a vibration-resistant, sheathed measuring cable (MI cable).




Pay special attention to the assembly/disassembly of the measuring insert. The surface of the sheathed cable of the measuring insert must not be damaged! (No creases, grooves, scratches etc.). Any damaged measuring insert must be replaced. It is advisable to renew the corresponding flame path fitting in this case.

Attention:

Only correct measuring insert length and correct measuring insert diameter ensure sufficient heat transfer from thermowell to the measuring insert. The bore diameter of the thermowell should be a max. 1 mm larger than the measuring insert diameter. Gaps of more than 0.5 mm between thermowell and the measuring insert will have a negative effect on the heat transfer, and they will result in unfavourable response behaviour of the thermometer.

When fitting the measuring insert into a thermowell, it is very important to determine the correct insertion length (= thermowell length for bottom thicknesses of \leq 5.5 mm). In order to ensure that the measuring insert is firmly pressed down onto the bottom of the thermowell, the measuring insert must be spring-loaded (spring travel: max. 10 mm).


Dimensions in mm

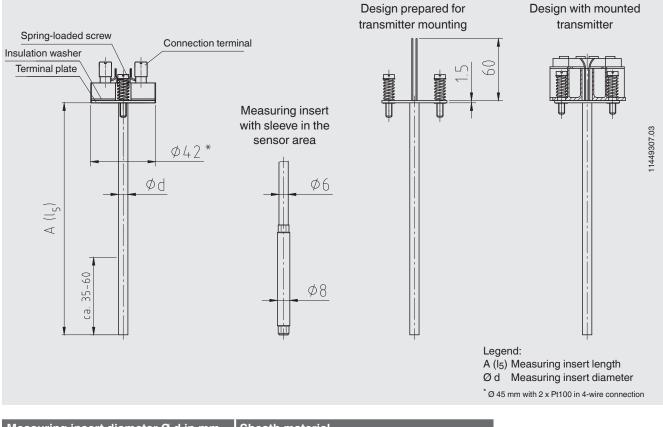

Measuring insert diameter Ø d in mm	Sheath material
3 ¹⁾	1.4571, 316L ¹⁾
6	1.4571, 316L ¹⁾
8 (6 mm with sleeve)	1.4571

1) Not possible with 2 x 4-wire versions

Thermowell selection

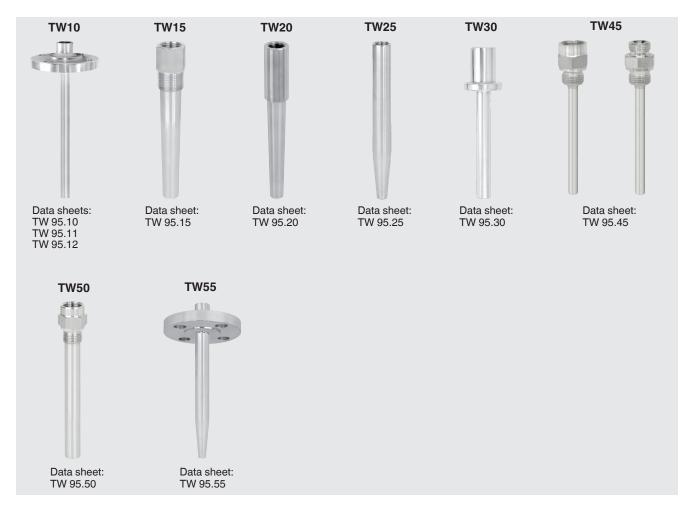

Special thermowells on request

Operating conditions

Mechanical requirements

Version	
Standard	6 g peak-to-peak, wire-wound measuring resistor or thin film
Option	Vibration-resistant probe tip, max. 20 g peak-to-peak, thin-film measuring resistor
	Highly vibration-resistant probe tip, max. 50 g peak-to-peak, thin-film measuring resistor

The information on vibration resistance refers to the tip of the measuring insert.

For detailed specifications on the vibration resistance of Pt100 sensors, see Technical information IN 00.17 at www.wika.com.

Ambient and storage temperature

-60 ¹⁾ / -40 ... +80 °C

1) Special version on request (only available with specific approvals)

Other ambient and storage temperatures on request

Certificates

Certification type	Measurement accuracy	Material certificate ²⁾
2.2 test report	х	x
3.1 inspection certificate	х	х
DKD/DAkkS calibration certificate	х	-

The different certifications can be combined with each other.

2) Thermowells have their own material certificates

Ordering information

Model / Explosion protection / Process connection / Version and material of threaded connection / Thread size / Measuring element / Connection method / Temperature range / Probe diameter / Insertion length A / Neck length $N(M_H)$ / Certificates / Options

© 09/2003 WIKA Alexander Wiegand SE & Co. KG, all rights reserved. The specifications given in this document represent the state of engineering at the time of publishing. We reserve the right to make modifications to the specifications and materials.

WIKA data sheet TE 65.12 · 07/2018

Page 12 of 12



WIKA Alexander Wiegand SE & Co. KG Alexander-Wiegand-Straße 30 63911 Klingenberg/Germany Tel. +49 9372 132-0 Fax +49 9372 132-406 info@wika.de www.wika.de